

OPERATION

TO CLOSE

To close shade, use the leather tabs to pull the shade from each side of the windshield and fasten by touching the velcro together at the leather tabs. Fold down visors for best fit. Typically, fastening at the center is all that is needed.

Note: If the rearview mirror includes an attached wire that is interfering with easy closure of the shade, adjust the position of the wire to run above and along the post of the rearview mirror (tie down to post if preferable).

TO OPEN

Fold up visors, hold onto the leather pull tabs, separate the velcro, and guide the shade back to the open position.

Be kind to your Eclipse Sun Shade--always guide it back rather than let it snap back.



TO REMOVE/REPLACE

To remove the shade from its mounting brackets, gently bend the center of the shade away from the post. To replace the shade, insert the lower tab first. Bend the center of the shade away from the post and insert the upper tab.

TO CLEAN FABRIC

For spot cleaning, use only a solution of mild detergent (such as Woolite) and water.

TO REINSTALL ON DIFFERENT WINDSHIELD

Use only new mounting brackets when reinstalling on a different windshield; e.g., replacement of broken windshield. Brackets are not designed to be reused.

WARNING

Open shade before operating vehicle. Obey all state and/or local regulations relating to the use of windshield sun shades.

ONE YEAR LIMITED WARRANTY

The Eclipse Sun Shade is warranted to be free from material and workmanship defects for one year. S4 Partnership will repair or replace, at its option, a defective unit when the unit is delivered prepaid to S4 Partnership or to its authorized service representative.

This warranty does not apply to damage to the product not resulting from defects in material to workmanship. S4 Partnership gives no other warranties, expressed or implied, including warranty of merchantability, fitness for a particular use, or design.



eclipsesunshades.net

SERVICE

Your new Eclipse Sun Shade has been manufactured with a high degree of care and quality control. However, should you have any difficulties with the product, please email us at info@eclipsesunshades.net.

If it becomes necessary to return this product for service, shipping charges must be prepaid. Ship Via UPS or U.S. Mail to
791 10th St. Suite 202. Naples, FL 34102

Please pack the complete unit (both halves) securely in its original carton or other suitable container along with proof of purchase, return authorization number, and your return address. We recommend that you insure the package. Damage in shipment is not covered by your warranty.



eclipsesunshades.net


NO TOOLS REQUIRED!

GLASS CLEANER AND PAPER TOWELS ARE ALL YOU NEED!

Following these step-by-step instructions will assure trouble-free operation.


Package contains: one two-piece shade, 4 mounting brackets, alcohol pads, instruction sheet

Figure 1

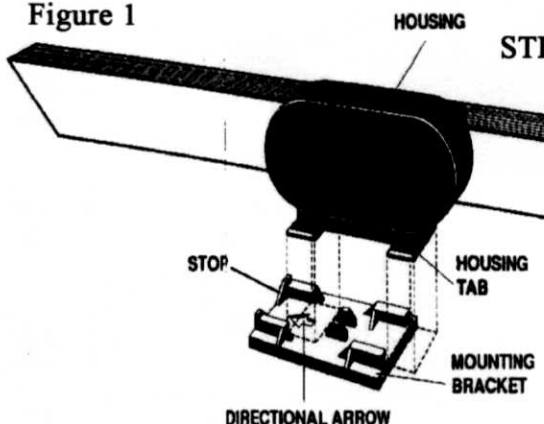

STEP 1: BRACKETS

Position each mounting bracket under the housing tab, as indicated at left, and slide onto the bracket all the way to the stop, making sure the directional arrows on brackets are pointing toward opposite ends of the shade, as indicated below.

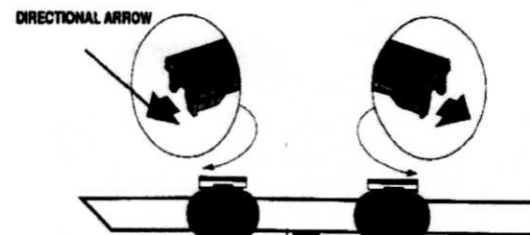

*** Figure 1.2**

STEP 2: CLEANING

With glass cleaner and paper towels, thoroughly clean the inside of the windshield next to the posts.

Wipe same area with alcohol pads provided and dry completely with a FRESH paper towel

Note: Do not install at temperatures below 60° F



Figure 3

STEP 3: POSITIONING

Hold the shade next to the windshield post (do not remove adhesive liners yet). The angle cut should be at the bottom with the velcro toward the center, as illustrated in Figure 3..

Note: The bottom of the shade should be close to the dashboard but not touching, and the plastic housing should be close to the windshield post but not touching.

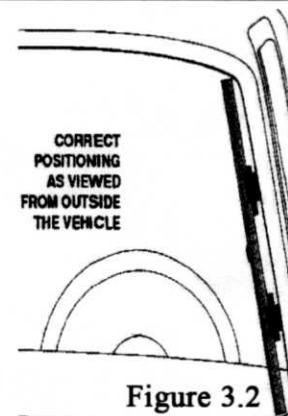


Figure 3.2

STEP 4: PEELING

Peel the protective liners from the adhesive

STEP 5: ATTACHING

Position shade as instructed in Step 3 and gently touch adhesive pads to windshield.

Apply light, steady pressure to each housing, as indicated in figure 5.

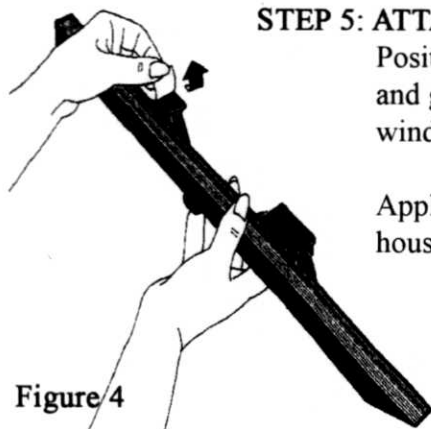


Figure 4

STEP 6: PRESSING

Remove shade as shown on reverse-side of this sheet. Step outside of vehicle and press on each adhesive pad so that there is a minimal amount of air trapped between glass and adhesive. Repeat Steps 1-6 for other shade half.

Note: Before replacing the shade in mounting brackets, allow 24 hours curing time for adhesive pads to reach full bond strength.

CAUTION: After installing, be careful not to spray cleaning solutions (such as Windex) directly on the mounting brackets as this will weaken the adhesive bond.



Figure 5

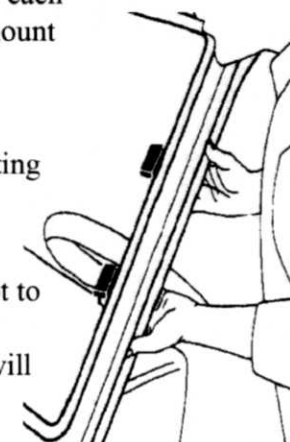


Figure 6